

Manual V. 150711


Some Tips on using Aero Spoke Holder

1. Identify 2 slots.

One is designed for Aero Extra series. Ex: Aero424, Aero360, Aero300

And the other one is bigger, which is designed for Aero series. Ex: Aero494, Aero494C, Aero394T...

There are only 0.5mm difference on both slots. please use spoke to find best match and tighter one)

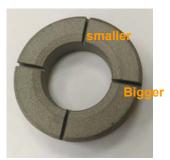

2. Finding the "Diamond shape hole"

The opens of slotes are cut to be the shape in order to match the transition of Aero spoke.



3. Lay spoke into right slot


Choose the right slot to lay the Aero spoke



Aero transition (The transition between round and flat diameter.)

4. Slight the holder up

Until the "diamond shape hole" fully holds the "Aero Transition" and stops.

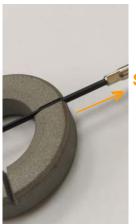

Slight the holder up